

Quick Start Guide

Aleratec[™]

www.aleratec.com

The Prosumers' Choice

DVD/CD Stand-Alone Duplicators

Part # 260155 and 260156

Welcome!

Congratulations on your purchase of an Aleratec DVD/CD Stand-Alone Duplicator, considered by industry experts to be one of the finest DVD/CD Duplicators available.

The entire staff at Aleratec is committed to providing you with complete satisfaction. Our courteous and knowledgeable staff will do everything possible to meet or exceed your expectations about owning and operating your new DVD/CD Duplicator.

For more detailed information on configuring the DVD/CD Duplicator and applying its various capabilities, please refer to the User Guide on the CD included.

This Quick Start Guide will lead you step-by-step through the basic operation procedures of your DVD/CD Duplicator.

We at Aleratec appreciate your selection of our product, and wish you great success and enjoyment of your new DVD/CD Duplicator.


Included Items

- 1:1 DVD/CD Copy Cruiser Pro HS or 1:1 DVD/CD Copy Cruiser Pro HLS; part number 260155 or 260156, respectively.
- Power Cord
- USB Cable
- Software and User Guide CD
- Quick Start Guide (this document)
- Aleratec Registration Card


Product Features

- True stand-alone duplication of DVDs and CDs, no computer required.
- Simple one-touch operation.
- USB 2.0 for computer connected operation
- Simple to use; no set-up required. Plug it in and start copying immediately.

Key Items on the DVD/CD Stand-Alone Duplicators

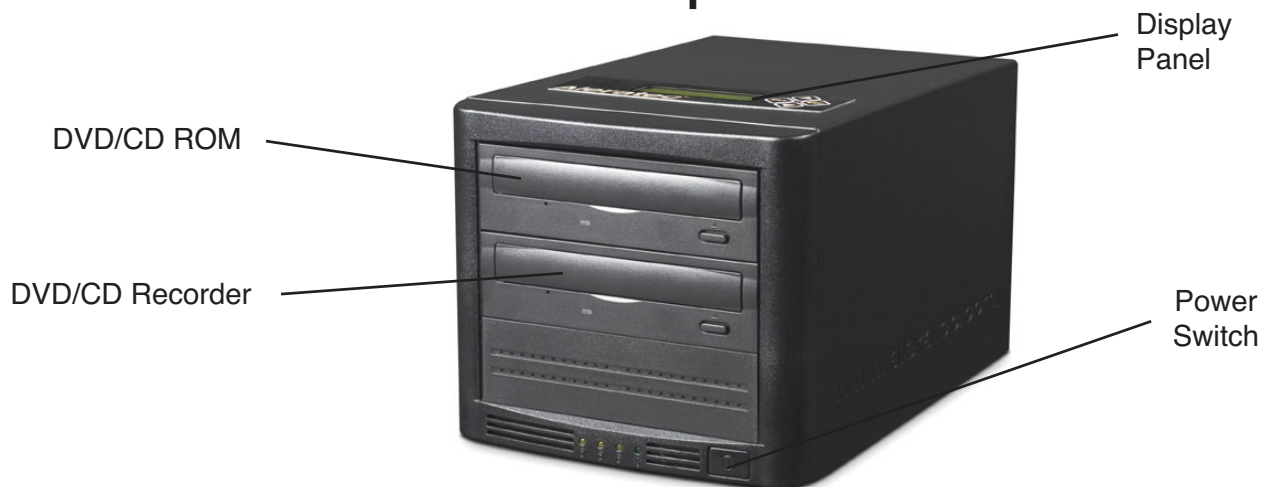

Quick Summary of Operation

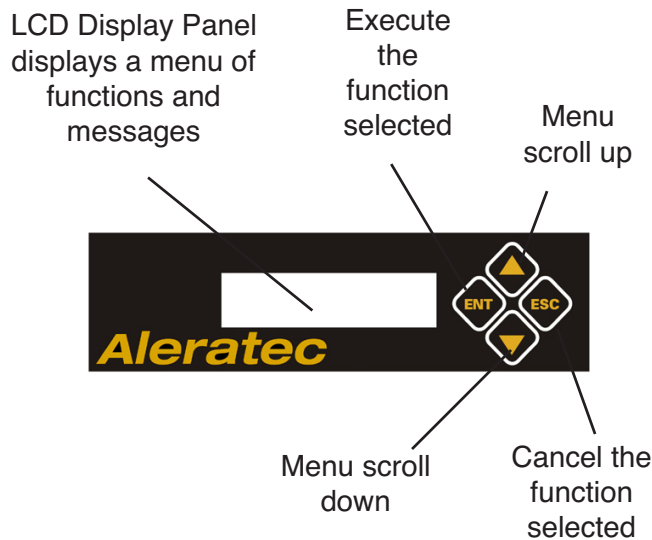

Stand Alone Duplication

- Use the arrow buttons to select the Copy function. Place the source DVD or CD in the upper drive. Place a blank DVD-R/RW, DVD+R/RW, CD-R, or CR-RW disc in the lower drive. After the lower drive detects the blank disc, press the ENT button to start copying.
- When Copy is completed, a good disc copy will be ejected automatically. Failed discs will remain in the lower drive and can be ejected manually. (Default setting: a good disc will be ejected. This can be changed; see the Setup section of the User Guide.) For continuous duplication, reload blank discs into the lower drive and repeat the procedure.

- A failed disc will remain in the lower drive (Default setting: A failed disc is NOT ejected. To manually eject a disc, press the ENT button to eject a failed disc or press the eject button on the drive to eject the disc.

External DVD/CD Recorder/Labeler

- Connect the USB cable (included) to the USB port on the back of your duplicator and to an empty USB port on your computer.
- Power on your duplicator. The display should show:

USB	L.H. Mode
D1 Mult	D2 Mult

If you do not see this display, refer to the USB section of the User Guide.
- Install the included Nero software (and USB drivers if you are using Windows 98 SE).
- Launch the Nero software and select the desired recording function. Insert appropriate media into the DVD/CD-Recorder, and follow the display prompts to record.

LightScribe Disc Labeling (P/N 260156 only)

- Place a LightScribe-certified disc with a blank label (label side down, data recording side up) in the DVD/CD Recorder.
- Launch the Label Maker software and you will find "Print LightScribe Label."
- Select a label type, design your label, then print it.

Technical Support Addresses and Phone Numbers

► By e-mail: support@aleratec.com

► By Telephone: **1-818-678-0484**

The Aleratec Technical Support Group can be reached between the hours of 8:30 a.m. and 5:30 p.m., Pacific Time, Monday through Friday, excluding U. S. holidays.

Please try to call from a phone that is near your computer system.

► Access is available 24 hours a day, 365 days a year, via:

The World Wide Web at: www.aleratec.com

FAX at: **1-818-475-5203**