

Quick Start Guide

1:5 HDD Cruiser™ Hard Drive Duplicator and Sanitizer Part No. 350104

Welcome!

Congratulations on your purchase of an Aleratec 1:5 HDD Cruiser, considered by industry experts to be one of the finest Hard Drive duplicators and sanitizers available.

The entire Aleratec team is committed to providing you with courteous service. Our knowledgeable staff will strive to make owning and operating your new Aleratec 1:5 HDD Cruiser a pleasant experience.

This Quick Start Guide will lead you step-by-step through the basic operation procedures of your 1:5 HDD Cruiser.

For more detailed information on configuring the 1:5 HDD Cruiser and applying its various capabilities, please refer to the User Guide on the CD included.

We at Aleratec appreciate your selection of our product, and wish you great success and enjoyment of your new 1:5 HDD Cruiser.

Included Items

- 1:5 HDD Cruiser
- Power Cord
- User Guide CD
- Quick Start Guide (this document)
- Aleratec Registration Card



Product Features

The 1:5 HDD Cruiser is a Hard Disk Drive Duplicator and Hard Disk Drive Sanitizer.

- Sanitizes/Wipes up to 6 drives clean with Secure Erase or the choice of three Overwrite patterns:
 - One Pass
 - Three Pass with Verify
 - Seven Pass per DoD 5220.22M
- Duplicates/Makes up to 5 HDD copies at once
- Quick load drive bays
- Supports 3.5" SATA HDDs

Optional 2.5" SATA HDD Adapter available (Aleratec Part Number 350105)

Key Items on the 1:5 HDD Cruiser

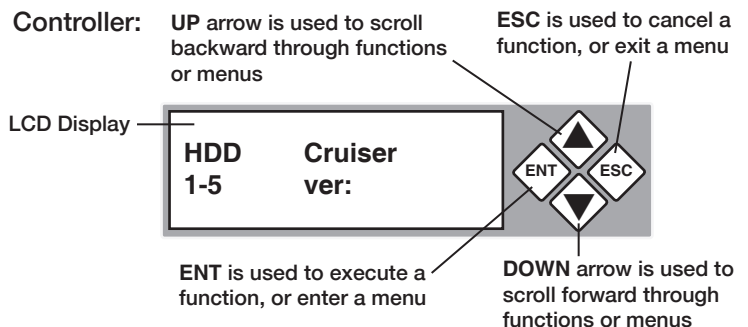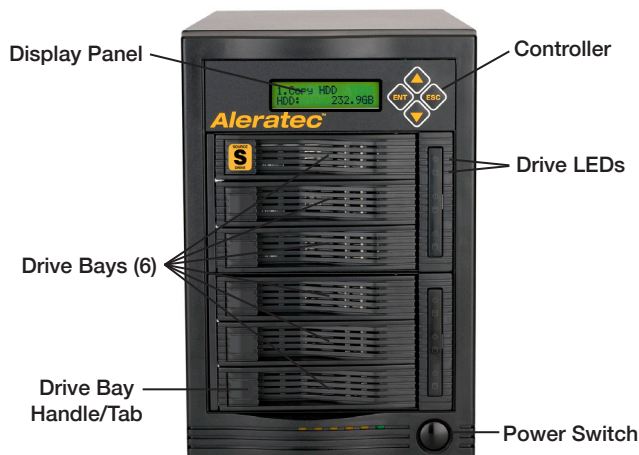

Summary of Operation

Loading the Hard Drives

1. Open the drive tray doors by lifting the tab on the left side of each drive bay you wish to use.
2. Take the Hard Disc Drive (HDD) and align the drive's SATA plug to the lower right hand side of the drive bay.
3. Slide the HDD into the drive bay until it stops. The drive will still be about 1 inch outside of the bay. When the door is closed it will push and plug the HDD into the duplicator.
4. Swing the drive bay door closed and press the left side of the door until the tab latches. When it latches, a click can be felt and heard.

Note: If you are duplicating, the source hard disk drive goes in the top bay.


Copy HDD

The "Copy HDD" function performs an actual copy from a source HDD to one or more target HDDs. The target HDDs must be at least as large as the source. The 1:5 HDD Cruiser will copy every block of capacity on the source HDD.

1. Load the source HDD and the target HDDs into the 1:5 HDD Cruiser. The system will auto-detect the hard drives.

Note: Before copying be sure that the capacity of the target HDD is equal to or larger than the source hard drive.


2. Press **ENT** to start copying. The system will auto-detect the hard drives.
3. During the copy process the 1:5 HDD Cruiser will display progress information.

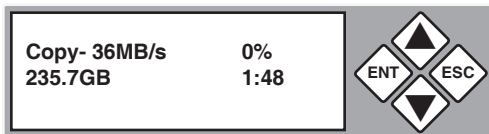

The amount of data remaining to be transferred (shown in gigabytes), and time will be displayed in decreasing increments as the percentage of completion increases.

Note: The copying speed, capacity and duration may vary from one source hard drive to another.

4. Once duplication is complete, a job status screen will be displayed.

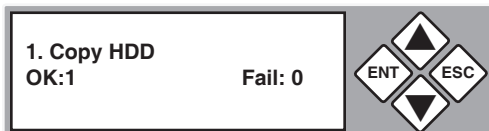

Technical Support Addresses and Phone Numbers

- By e-mail: support@alratec.com
- By Telephone: 1-818-678-0484 – Skype: [support.alratec.com](https://www.skype.com/join/aleratec.com)

Technical Support Group can be reached 8:00 AM to 5:00 PM, Pacific Time, Monday through Friday, excluding U.S. holidays.

Please try to call from a phone near your computer system.

- Access is available 24 hours a day, 365 days a year, via:

The World Wide Web at: www.alratec.com

FAX at: 1-818-678-0483